

## 1 PERSON STANDING FOOT FIDGET DESK (KC-11)

### Parts

Base (A)

Stem (B)

Table Top Frame (C)

Table Top (D)

Hardware Bag (E)

### Assembly Instructions

1. Orient Base (A) so that the long sections of the legs face you.
  - a. Unscrew and remove the bolts (2), split washers (2) and flat washers (2) from the mounting plate on the Base (A). Leave the mounting plate under the Base (A).
2. Align the Stem (B) section perpendicular to the Base (A) crossbar with the adjustment knob at the top, pointing toward you. The Stem (B) will be angled back toward the longer section of the legs.
  - a. Insert a bolt through a split washer, a flat washer, a hole in the bottom of the Stem (B), the corresponding hole in the Base (A), and into the mounting plate under the Base (A). Finger tighten.
  - b. Repeat for the second hole.
  - c. Adjust the Stem (B) so that it is in alignment with the Base (A) and finish tightening the bolts to flatten the split washers.
3. Position the Table Top (D) with the blue top down (gray bottom up), and inside of the curve facing you.
  - a. Place the Table Top Frame (C) onto the gray side and align the 4 holes in the Table Top Frame (C) with the 4 pre-drilled and marked holes on the Table Top (D). The adjustment holes in the Table Top Frame (C) should be facing both you and the inside of the curve of the Table Top (D)
  - b. From the Hardware Bag (E), insert each of the 4 wood screws through a flat washer and through the holes in the Table Top Frame (C) into the Table Top (D). Tighten by hand with a Phillips screwdriver.
4. Insert Table Top (D) and Table Top Frame (C) assembly into the top of the Stem (B) and Base (A) Assembly.
  - a. Loosen the black adjustment knob and pull toward you to set the appropriate table height.
  - b. Tighten black adjustment knob to remove any play in the desk.
5. If desired, adjust levelers in the Base (A). If any the desk appears to be twisted, loosen the mounting bolts between the Base (A) and the Stem (B), straighten the desk, and retighten. The Table Top's (D) attachment to the Table Top Frame (C) may also be adjusted by loosening the 4 wood screws in the Base (A), straightening the Table Top (D), and retightening.

Please contact our Customer Service department at (843) 879-2201 if you have any questions or concerns.

-Action Based Learning